



## What's Included with the Kit:

1x Sensor

1x 1-Room Indicator



1x Indicator decals

2x 12" USB Power cords



1x Manual

 
# Room Occupancy Monitor

## Quick Guide Manual


For complete instructions, please see the full Manual on the SECO-LARM website.

### Overview:

#### Sensor

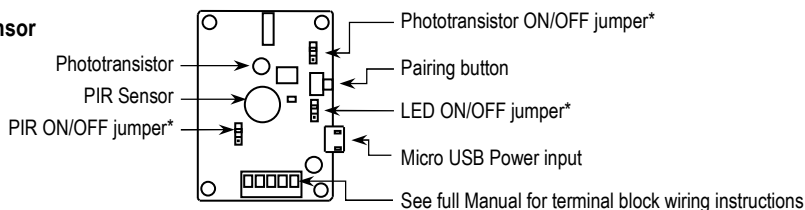

#### Indicators


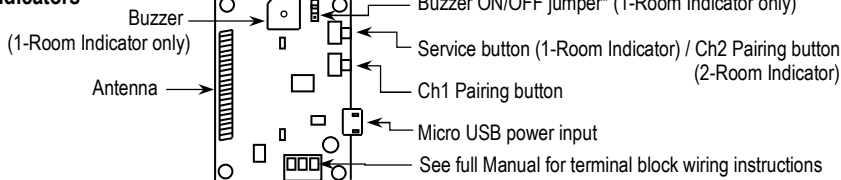 


\*Phototransistor jumper's default is OFF, other jumpers' default is ON



### Basic DIY Installation Using Micro USB Power:

  The Room Monitor Kit (RM-R100-KB1Q) is pre-learned and ready to go right out of the box. Just mount and connect to power via the included micro USB cable and any USB adapter. Follow the steps below for a basic installation.

1. Find a location to mount the Sensor/Indicator. Keep in mind that the included micro USB cord is 12" long.
2. Use a paper clip and program as needed. See *Setting a Reminder Time* on pg. 2.

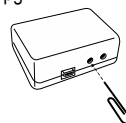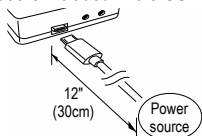

  3. Apply double-sided mounting tape to the back of the Sensor/Indicator and mount.
4. Connect the micro USB plug to the Sensor/Indicator and connect to power.

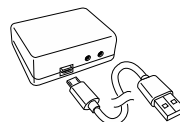




# ENFORCER Room Occupancy Monitor

## Setting a Reminder Time:

The Room Monitor Sensors and Indicators can be programmed to flash if the room has been occupied for an extended period of time.

1. Connect to power and press the pairing button within 5 seconds of powering on.
2. After pressing the pairing button, count number of times the LEDs flash.
3. Press the pairing button until desired reminder time is set. See table below for reminder time settings.
   
# of Flashes	1	2	3	4	5	6	7
Reminder time	Disabled	3min	5min	10min	15min	20min	30min

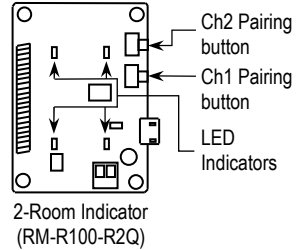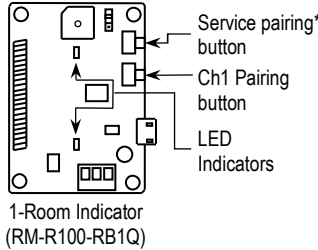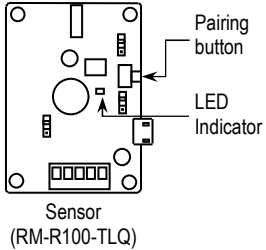

\*Service pairing button cannot be used to set a reminder time.

**IMPORTANT:** For instructions on how to pair additional Sensors and Indicators, terminal block wiring instructions, and other additional information, please see the full Manual on the SECO-LARM website.

## Also Available from SECO-LARM®:

### Additional 2-Room Indicator



RM-R100-R2Q

### Wall-Mount Help Button



RM-R100-TBQ

### Indicator Remote



RM-R100-TH2Q

### FCC COMPLIANCE STATEMENT

FCC ID: K4ER100TLQ

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

**WARRANTY:** This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for one (1) year from the date of sale to the original customer.

**NOTICE:** The SECO-LARM policy is one of continual development and improvement. For that reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints. All trademarks are the property of SECO-LARM U.S.A., Inc. or their respective owners. Copyright © 2019 SECO-LARM U.S.A., Inc. All rights reserved.

## SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606

Phone: (949) 261-2999 | (800) 662-0800

Website: [www.seco-larm.com](http://www.seco-larm.com)

Email: [sales@seco-larm.com](mailto:sales@seco-larm.com)

PITSW1

Order Part# 763-189-1%

MQ\_RM-R100-xxxQ\_190328.docx