

# ENHANCED Extenders for HDMI over Single Cat5e/6

# Manual



MVE-AT11-W1NQ













-	Extender for HDMI over Cat5e/6	
MVE-AT11-W1NQ	Wall-plate Extender for HDMI over Cat5e/6	

- Extend HDMI signals up to 230ft (70m) at 1080p over a single Cat5e/6 cable
- Plug and play operation comes as a complete set
- Choose from either a tabletop model (MVE-AT11-01NQ) or a double-gang wall-plate model (MVE-AT11-W1NQ)
- The tabletop and wall-plate models are compatible with each other. Mix and match the transmitter from one model to the receiver of the other.





#### Introduction:


The ENFORCER Enhanced Extenders for HDMI over Single Cat5e/6 extend the range of HDMI signals by using an active transmitter and receiver to send video and audio over a single Cat5e/6 cable. 1080p HDMI Signals can be transmitted up to 230ft (70m) between the two units with zero signal loss. The extender supports IR signals using the included adapters, allowing the user to use a remote control from one end of an installation to control a device such as a TV or media player at the opposite end of the installation.

#### Features:

- **Signal Strength** Active operation ensures that the signal strength will remain strong over the length of the cable.
- Distance The Enhanced Extenders for HDMI over Single Cat5/e6 can transmit a clear HDMI signal up to 230ft (70m).
- **Formats Supported** The Enhanced Extenders for HDMI over Single Cat5e/6 support both progressive and interlaced formats: 1080p/1080i/720p/576p/576i/480p/480i.
- Plug and Play The Enhanced Extenders for HDMI over Single Cat5e/6 come as a complete set consisting of a transmitter, receiver, power supplies, and IR adapters. No adjustments or settings need to be made. The unit is ready to use right out of the box.
- **Zero Signal Loss** Integrated circuits in the transmitter and receiver clean, buffer, and amplify the HDMI signal. This prevents signal loss and ensures a clear signal regardless of the length of the cable up to the maximum range.
- Connect Multiple Units Repeat up to four sets to extend HDMI range up to 918ft (280m).
- Mix and Match The tabletop and wall-plate models are compatible with each other.
  Connect a transmitter from one model to the receiver of another.

## Specifications:

Input video signal		0.5~1.0 Vp-p	
Input DDC signal		5Vp-p (TTL)	
Maximum sing	le link range	1920x1200, 1080p	
Deep color		36-bit	
Video formats supported		High-speed HDMI with 3D, HDCP 1.2	
Audio formats supported		LPCM, Dolby-AC3, DTS 7.1, DSD	
Output video		HDMI	
Resolutions supported		1080p/1080i/720p/576p/576i/480p/480i	
Range – 1080p		Cat6: Up to 230' (70m)	
Video amplifier bandwidth		10.2Gbps	
Cat5e/6 Wiring standard		T568-B	
Operating voltage		5VDC	
Power supply		2A@5VDC (2 adapters) (2.1mm plug)	
Current draw	Transmitter	450mA@5VDC	
	Receiver	900mA@5VDC	
Operating temp	perature	5°~131° F (-15°~55° C)	
Operating humidity		5~90% RH (no condensation)	
Dimensions	MVE-AT11-01NQ	4 <sup>5</sup> / <sub>16</sub> "x2 <sup>15</sup> / <sub>16</sub> "x <sup>7</sup> / <sub>8</sub> " (110x75x23mm)	
	MVE-AT11-W1NQ	4 <sup>1</sup> / <sub>16</sub> "x4 <sup>1</sup> / <sub>2</sub> "x <sup>5</sup> / <sub>16</sub> " (116x115x34mm)	
Weight	MVE-AT11-01NQ	9.2-oz (260g)	
	MVE-AT11-W1NQ	9.3-oz (264g)	

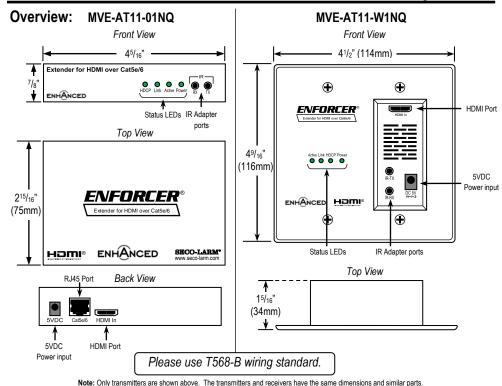

## **Status LED Chart:**

	Steady ON	Flashing	OFF
Active	N/A	Unit is working	Unit is not working/powered
Link	Connection OK	Check connection	Not connected
HDCP	Video has HDCP	Video does not have HDCP	No video
Power	Power ON	Check power	Power OFF

## **Parts List**

- 1 x Transmitter
- 1 x Receiver
- 2 x 5VDC Power adapters
- 1 x IR Transmitter
- 1 x IR Receiver
- 1 x Manual


#### Installation:

- 1. Determine where the transmitter and receiver will be wired as well as how much Cat5e/6 cable will be necessary.
- 2. Connect the HDMI cable to both the transmitter and the source device.
- 3. Connect the HDMI cable to both the receiver and the display.
- 4. Connect the Cat5e/6 cable to both the receiver and transmitter units.


Note: For best results, use Cat6 cable.

- 5. Connect one 5VDC adapter to the transmitter and another to the receiver.
- 6. Determine which device, if any, will be controlled by the remote control. Install the IR transmitter to the IR-TX port of the closest extender unit, pointing the IR transmitter at the device. Install the IR receiver to the IR-RX port of the other extender unit. Point the remote control at the IR receiver when in use.
- 7. **MVE-AT11-W1NQ Only:** Install the MVE-AT11-W1NQ using a standard double-gang box.
- 8. Switch on the HDMI source and display to verify that the system is functioning properly.

### ENFORCER Enhanced Extenders for HDMI® over Single Cat5e/6

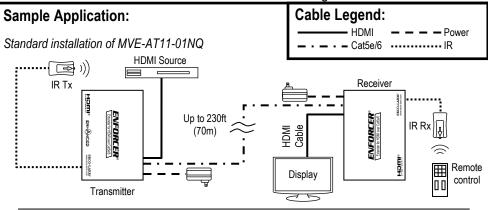

#### Installing MVE-AT11-01NQ transmitter with MVE-AT11-W1NQ receiver

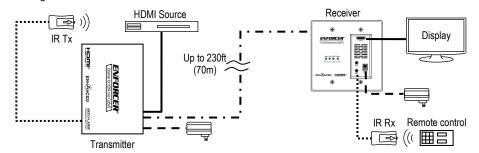

## Troubleshooting:

correctly

HDMI device does not function

- Use T568-B wiring standard
- Make sure the extender is powered on both sides.
- Make sure the source and the display are powered.
- Test the Cat5e/6 cable between the receiver and transmitter and make sure it is functional
- Make sure that there are no problems with the HDMI source, HDMI cables, or HDMI display by plugging the source directly into the display using an HDMI cable
- Make sure that the transmitter and receiver are plugged into the correct units
- Make sure the HDMI source is compatible with the HDMI display.

HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLCC in the United States and other countries.

WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for a period of one (1) year from the date of sale to the original consumer customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM.

This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair, or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship.

The sole obligation of SECO-LARM, and the purchaser's exclusive remedy, shall be limited to replacement or repair only, at SECO-LARM option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damages of any kind to the purchaser or anyone else.

NOTICE: The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors.

Copyright © 2013 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

## SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606 Tel: (949) 261-2999 | (800) 662-0800 Website: www.seco-larm.com

PICHN1

Email: sales@seco-larm.com

SECO-LARM U.S.A., Inc.