CBA®

AS-1511

Auto Voice Reminder

Manual

- Plays a pre-recorded message whenever PIR sensor is triggered
- Use as a daily reminder or to leave messages for family members
- Use to play warning messages as a crime deterrent
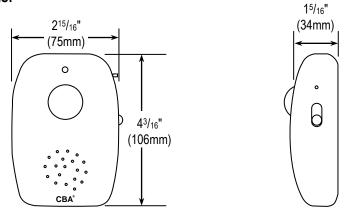- Adjustable volume
- Wall mountable

SECO-LARM® *SLI*

Specifications:

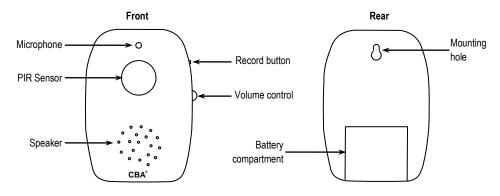| Model number	**AS-1511**
Detection angle (horizontal)	100°@30'
Recording length	15 seconds
Power	3x AAA Batteries (Not included)
Power on delay (warmup)	Up to 15 seconds
Estimated battery life	Up to two months (10 triggers/day)
Operating temperature	-4º~113º F (-20º~45º C)
Dimensions	$2^{15}/_{16}$"x$1^{5}/_{16}$"x$4^{3}/_{16}$" (75x34x106 mm)

Parts List:

1x Auto Voice Reminder   1x Manual   1x Mounting screw   1x Plastic wall anchor

Dimensions:
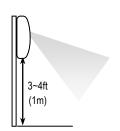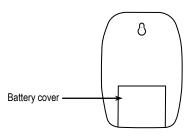

Overview:

Installation:

1. Select the location where the sensor will be mounted.
2. The sensor should be mounted 3~4ft (1m) above ground, have a clear view of the desired detection area, and be safe from water.
3. Install the mounting screw (included) where the sensor will be mounted.
4. Hang the sensor on the screw through the sensor's mounting hole.

3~4ft
(1m)

Installing the Battery:

1. Remove the cover by pressing and sliding the battery cover on the back of the unit.
2. Install three AAA batteries (not included), making sure to observe correct polarity.
3. Replace the cover.

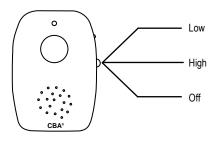Battery cover

Recording a Message:

1. Set the volume control switch to "High" and wait 15 seconds.
2. Press and hold the "Record" button. When the unit beeps once, speak the message clearly (maximum message length is 15 seconds). When finished, release the "Record" button and the unit will beep twice.
3. Trigger the sensor to test that the message was recorded correctly. Whenever the sensor is triggered the message will play automatically.

Remember your keys

Note: Messages must be 15 seconds or less. If the message being recorded goes beyond 15 seconds, the message will be cut off and the unit will beep twice.

Adjusting the Volume:

1. Use the volume adjustment switch to adjust the volume level.
2. The top position sets the volume Low.
3. The middle position sets the volume High.
4. The bottom position turns the unit Off.

Low

High

Off

CBA®

Also Available from SECO-LARM:

Wireless Motion Alert
RC-135Q

Wireless Alert System
RA-4961-K1Q

Wireless Vibrating Receiver
RA-4961-VPQ

Wireless Indoor PIR Sensor
RA-4961-PRQ

Wireless Mailbox/Tilt Sensor
RA-4961-MBQ

Wireless Outdoor PIR Sensor
RA-4961-DSQ

Wireless Magnetic Contact
RA-4961-MCQ

Wireless Pushbutton
RA-4961-PBQ