

# ENFORCER<sup>®</sup> VIDEO

## MANUAL

### EVT-PB1-L05Q

#### Video, Power and Data Balun with Voltage Converter



The ENFORCER EVT-PB1-L05Q Video, Power and Data (VPD) Balun with Voltage Converter combines the flexibility of a VPD Balun with the ability to convert AC or DC voltage for use in low voltage DC applications. The VPD balun with voltage converter changes 12/24VAC/VDC input voltage to a regulated 5/12/24VDC adjustable output voltage. Converted DC power is regulated to provide stable power suitable for voltage sensitive cameras.

- Transmit video up to 2,000' over Cat5
- Selectable 5/12/24VDC output via jumper
- Regulated and filtered output.
- Output current protection – 500mA
- Built-in overload protection.
- Dual-colored LED power output indicator:
  - Red: 5/12VDC
  - Blue: 24VDC
- Green power input LED indicator.
- Small size for easy installation.


**SLI<sup>®</sup>**  
**SECO-LARM<sup>®</sup>**



**Specifications:**

		<b>EVT-PB1-L05Q</b>		
<b>Voltage Converter</b>	Output voltage	5/12/24VDC selectable by jumper (default 12VDC)		
	Operating voltages	Input voltage	Regulated output voltage	
		8 ~ 30VDC/VAC	5VDC	
		15 ~ 30VDC/VAC	12VDC	
		24 ~ 27VDC/VAC	24VDC	
	Output current	500mA @ 5/12/24 VDC		
	Voltage input LED indicator	Green		
	Voltage output LED indicator	Red	5/12VDC	
Blue		24VDC		
Current protection	PTC 500mA			
<b>Video</b>	Range	2,000' (610m) B/W, 1,300' Color (400m)		
	Video format	RS170, NTSC, PAL, SECAM, CCIR		
	Maximum input	1vp~p		
	Insertion loss	< 2dB per pair from DC ~ 5 Mhz		
	Return loss	>-15dB from DC ~ 5 Mhz		
	Common mode rejection	60dB, 15KHz~5MHz		
	Frequency response	DC ~ 5 Mhz		
	Power	No power required for video		
	Wire type	UTP (unshielded twisted pair)		
	Wire category	20 - 24 AWG @ screwless terminal blocks CAT2 or better, CAT5 ideal, CAT6 improves range		
<b>Connections</b>	Connectors	In	Removable terminal block	
		Out	Video	Pigtail BNC
	Power		Pigtail DC plug (center pin positive)	
	Data		Wire	
	Attenuation	DC ~ 5 Mhz, 1.5 dB max		
	Impedance	Coax, male BNC: 75 Ohms@ 1 MHz		
Terminal block: 100 Ohms @ 1 MHz				
<b>Other</b>	Dimensions	3 1/4" x 2 9/16" x 3/4" (81 x 65 x 20mm)		
	Humidity range	0 ~ 95%		
	Temperature Range	14°~165°F (-10°~74°C)		
	Case	ABS Plastic		

**Figure 1: Video, Power and Data Balun with Voltage Converter Detail**

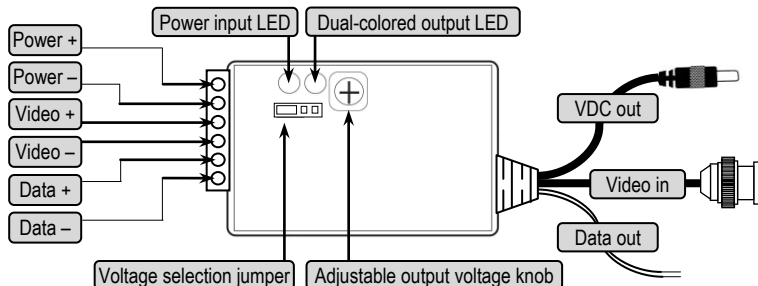

**Installation:**

1. Run UTP cable to the camera where the VPD balun is being installed.
2. Remove the cover by simultaneously pressing down on the top cover, and lifting up on the side mounting tabs. This will release the tight seal between the top and bottom covers.
3. Set the desired output voltage using the selection jumper according to table 1 below.
4. Connect the output wires from the power supply to the power input terminal blocks on the VPD balun. Observe correct polarity.
5. Apply power and use table 2 and 3 below to check the status of the input and output voltages.  
**NOTE: To avoid potential damage, use a voltage meter to ensure proper voltage is present at the input and output terminal blocks. Observe correct polarity.**
6. Connect the camera to the DC plug on the balun.
7. If the output voltage is low, then turn the rotary knob clockwise to increase the voltage or counter-clockwise to decrease the voltage.
8. Connect the video input male BNC input in from the VPD Balun to the camera.
9. If using a RS-485 controlled camera, connect the data in wires to the camera.
10. Using the remaining terminal blocks, connect the data and video wires to the balun according to Figure 1.  
**IMPORTANT: Correct polarity must be observed on all connections.**
11. Replace the cover on the voltage converter.

**Table 1: Adjustable Output Voltage**

Input Voltage	Output Voltage	Adjustable Voltage Range	Jumper Settings
8~30VDC/VAC	5VDC	4.5 ± 5%VDC	■ ■ ■ ■
15~30VDC/VAC	12VDC	12.6 ± 5%VDC	■ ■ ■ ■
24~30VDC/VAC	24VDC	24.0 ± 5%VDC	■ ■ ■ ■

**Table 2: Wiring Distance 12 VDC Voltage Drop**


24 AWG Wire	1 Pair	2 Pairs	3 Pairs
250mA	90'	220'	550'
500mA	45'	110'	285'
750mA	30'	75'	190'
1A	20'	55'	140'

**Table 3: LED Indicators**

LED colors	Status
Green	Input power is connected
Red	Output voltage is 5 / 12VDC
Blue	Output voltage is 24VDC

**Figure 1: Sample Application**

ST-2406-7A Power Supply

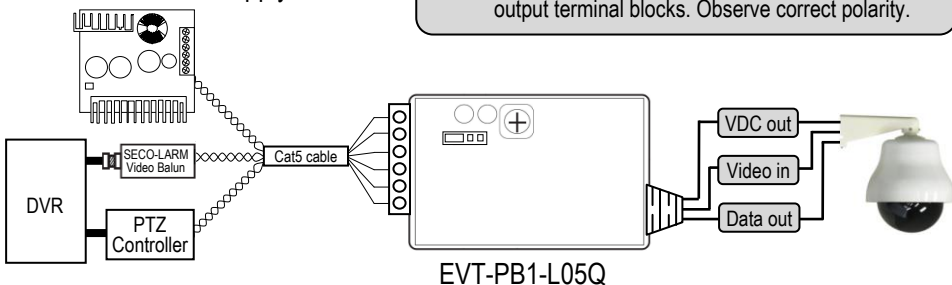

## Troubleshooting:

- |                            |   |
|----------------------------|---|
| Output voltage is low/high | <ul style="list-style-type: none"><li>• Check output voltage jumper settings.</li><li>• Check output voltage adjustment.</li><li>• Check input voltage to make sure it meets the input requirements</li></ul> |
| Green input LED not on     | <ul style="list-style-type: none"><li>• Check input power connections with multimeter to verify correct input voltage</li></ul>   |
| Blue/red output LED not on | <ul style="list-style-type: none"><li>• Check to see if the load exceeds the maximum limit</li><li>• Temporarily disconnect power input and output wires for 30 seconds before connecting</li></ul>           |

## Also Available from SECO-LARM:

Passive VGA Balun



EVT-SBP-GQ

Passive & Active Video Baluns



EVT-PB1Q  
(shown)

BNC-to-VGA Converter



VC-1BAQ

VPD Balun with Voltage Booster



EVT-PB1-H05Q

Voltage Booster



ST-HB105-TTQ

Voltage Converter



ST-LA110-TTQ

Video Amplifiers



VA-2101B-WQ

Video Distributors



VA-1104B-WQ

**WARRANTY** This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for a period of one (1) year from the date of sale to the original consumer customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair, or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM, and the purchaser's exclusive remedy, shall be limited to replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damages of any kind to the purchaser or anyone else.

**NOTICE:** The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors. Copyright © 2008 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

## SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606  
Tel: 800-662-0800 / 949-261-2999 Fax: 949-261-7326

Website: [www.seco-larm.com](http://www.seco-larm.com)  
E-mail: [sales@seco-larm.com](mailto:sales@seco-larm.com)

 PITSW1  
mi-EVT-PB1-L05Q.docx